


# Diagram C-430E

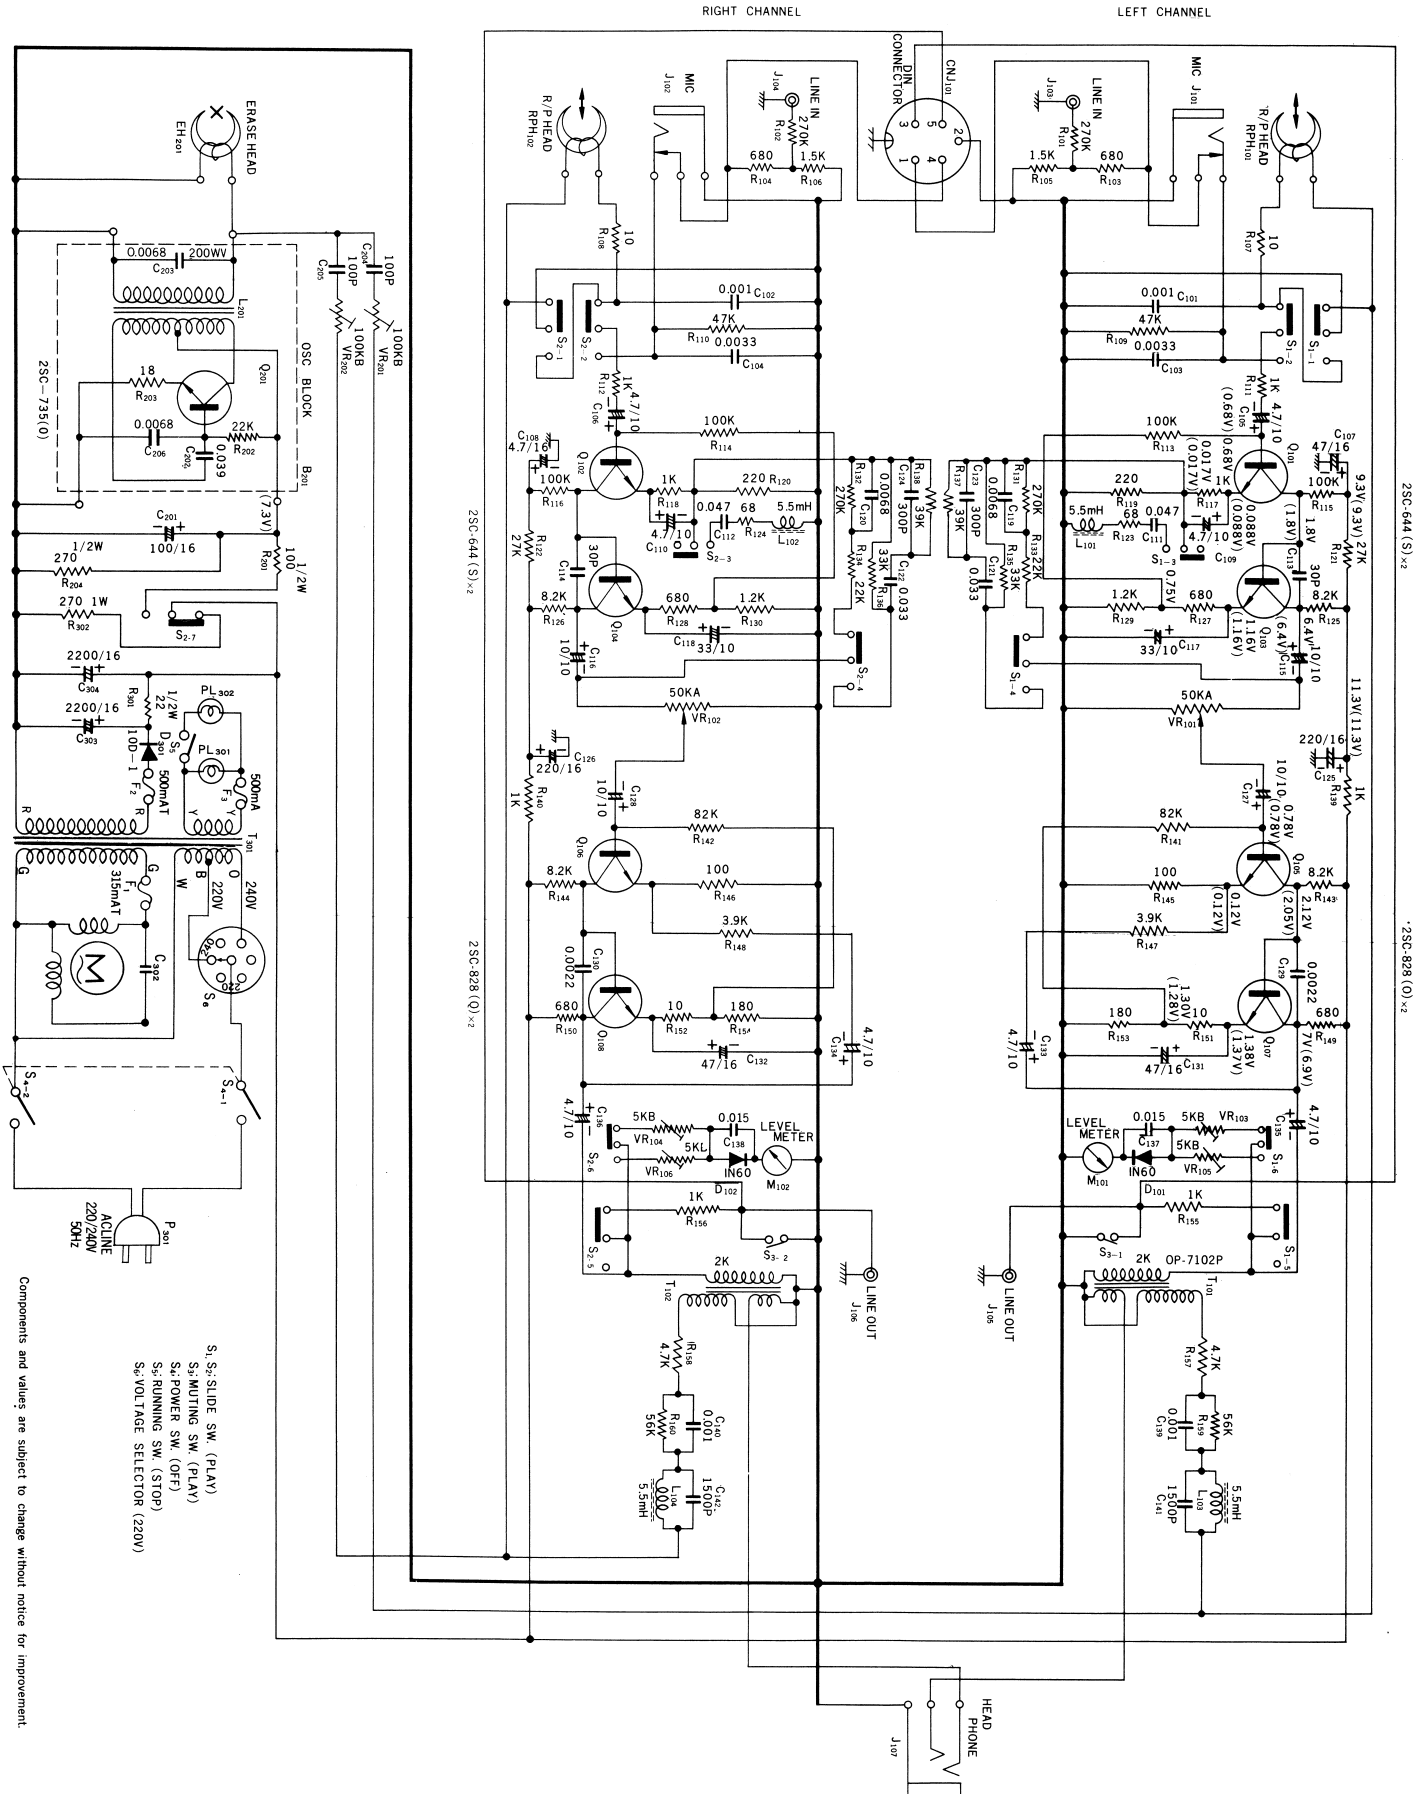

- S1-S2: SLIDE SW. (PLAY)
- S3: MULTING SW. (PLAY)
- S4: POWER SW. (OFF)
- S5: RUNNING SW. (STOP)
- S6: VOLTAGE SELECTOR (220V)

Components and values are subject to change without notice for improvement.

25C-644 (S) x2

25C-828 (O) x2