 


1' RF SECTION

2' RF SECTION

OSC. SECTION




T1-2-3-4-6

T5-7-8-9-10

TRANSISTOR TERMINAL CONNECTION

Dette diagram omfatter SAILOR 46 TD, serie A.  
 Dieses Schaltschema betrifft SAILOR 46 TD, Serie A.  
 This diagram refers to SAILOR 46 TD, series A.  
 Ce schéma comprend SAILOR 46 TD, série A.  
 Este diagrama comprende SAILOR 46 TD, serie A.


DIAGRAM SAILOR 46TD  
 A/S S. P. RADIO  
 DANMARK

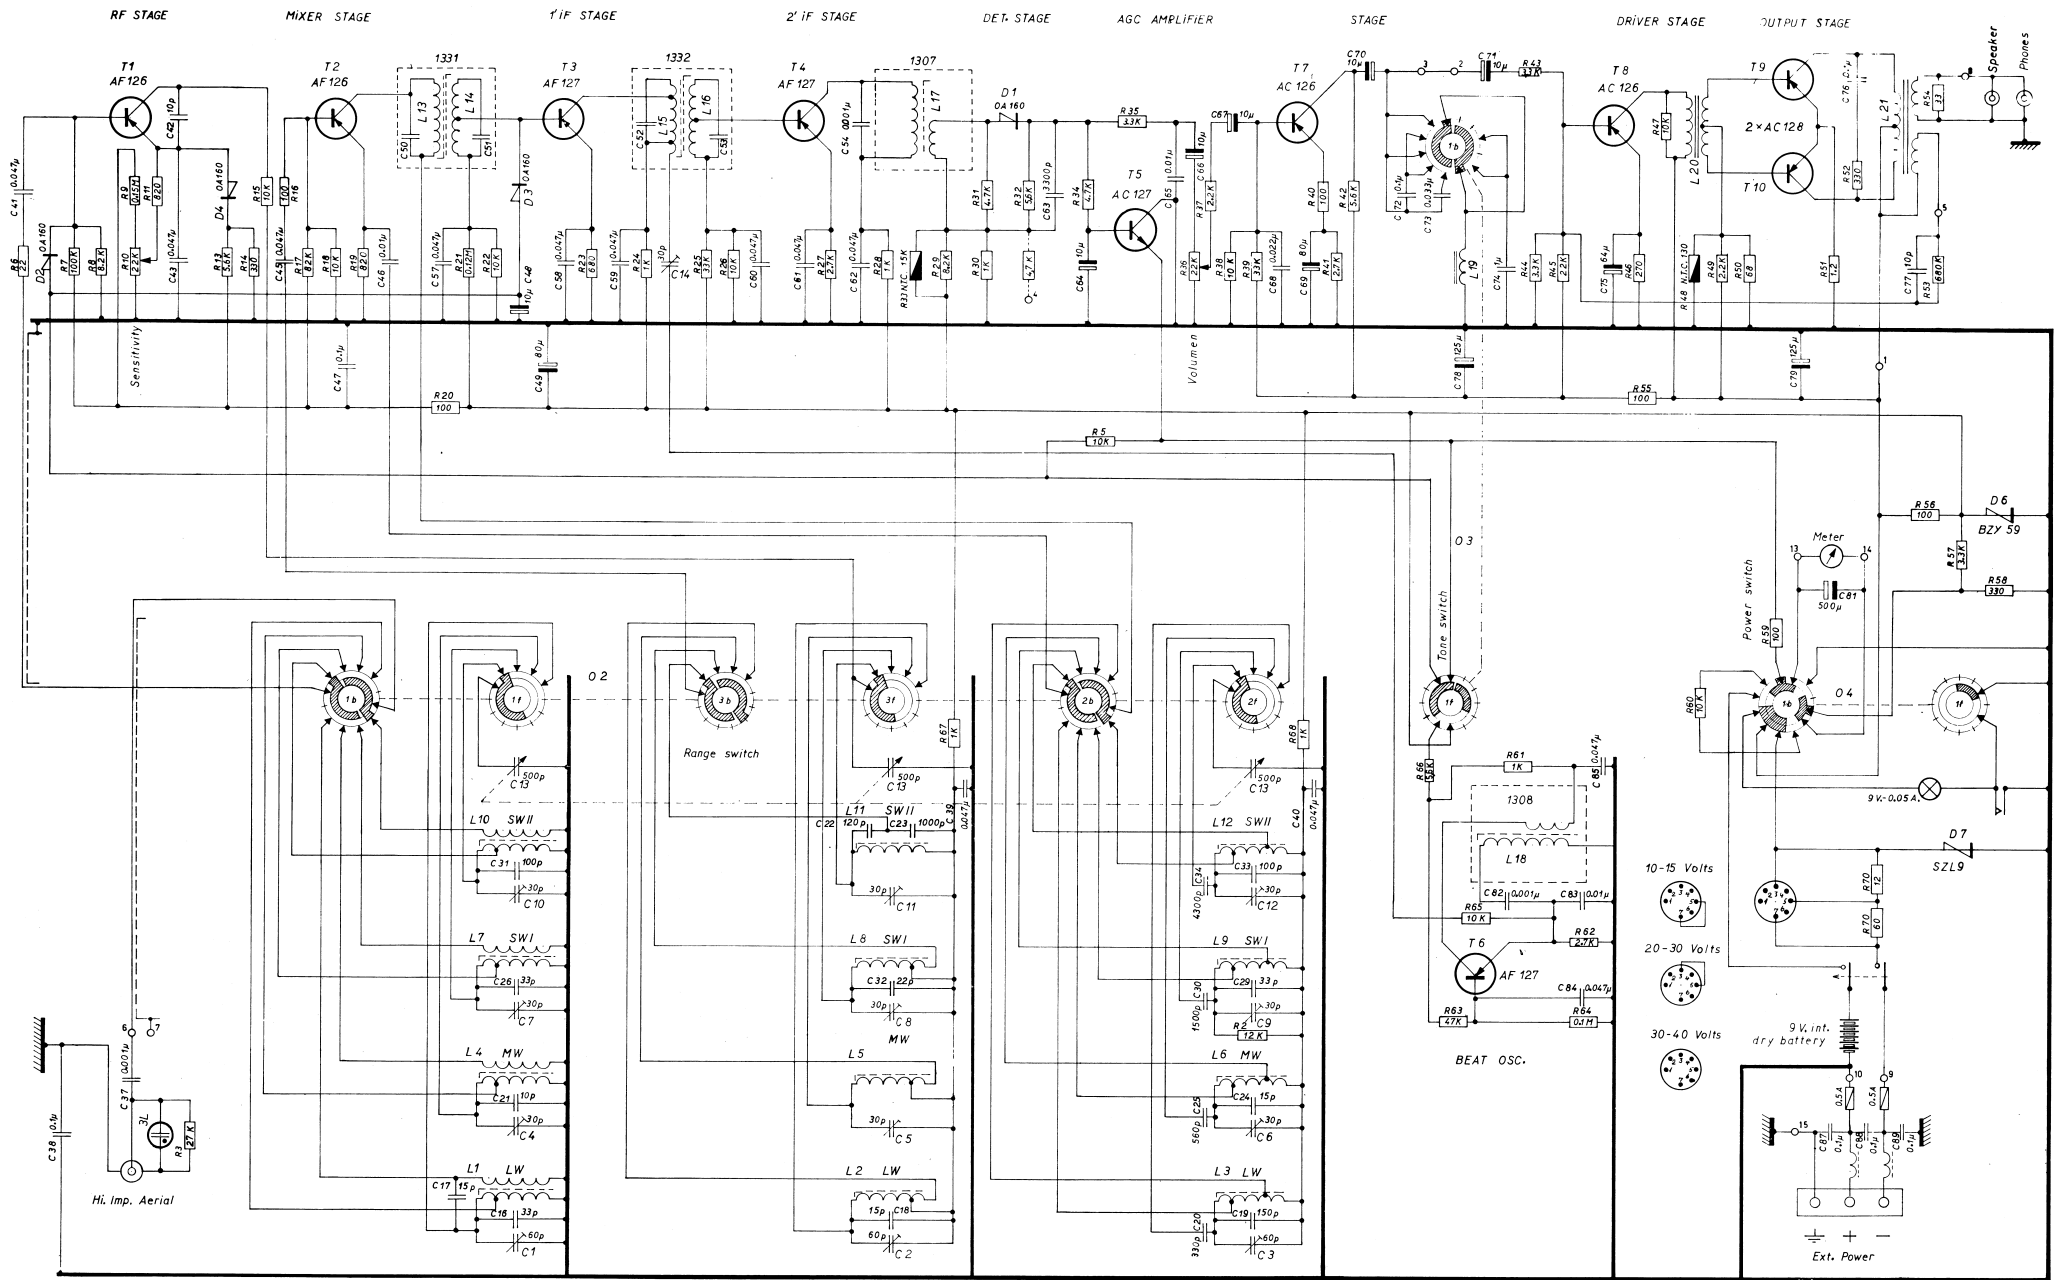


1<sup>st</sup> RF SECTION

2<sup>nd</sup> RF SECTION

 OSC. SECTION



T1-2-3-4-6

 


T5-7-8-9-10

TRANSISTOR TERMINAL CONNECTION

Dette diagram omfatter SAILOR 46 TD, serie B.  
 Dieses Schaltschema betrifft SAILOR 46 TD, Serie B.  
 This diagram refers to SAILOR 46 TD, series B.  
 Ce schéma comprend SAILOR 46 TD, série B.  
 Este diagrama comprende SAILOR 46 TD, serie B.


DIAGRAM SAILOR 46TD  
 A/S S. P. RADIO  
 DANMARK

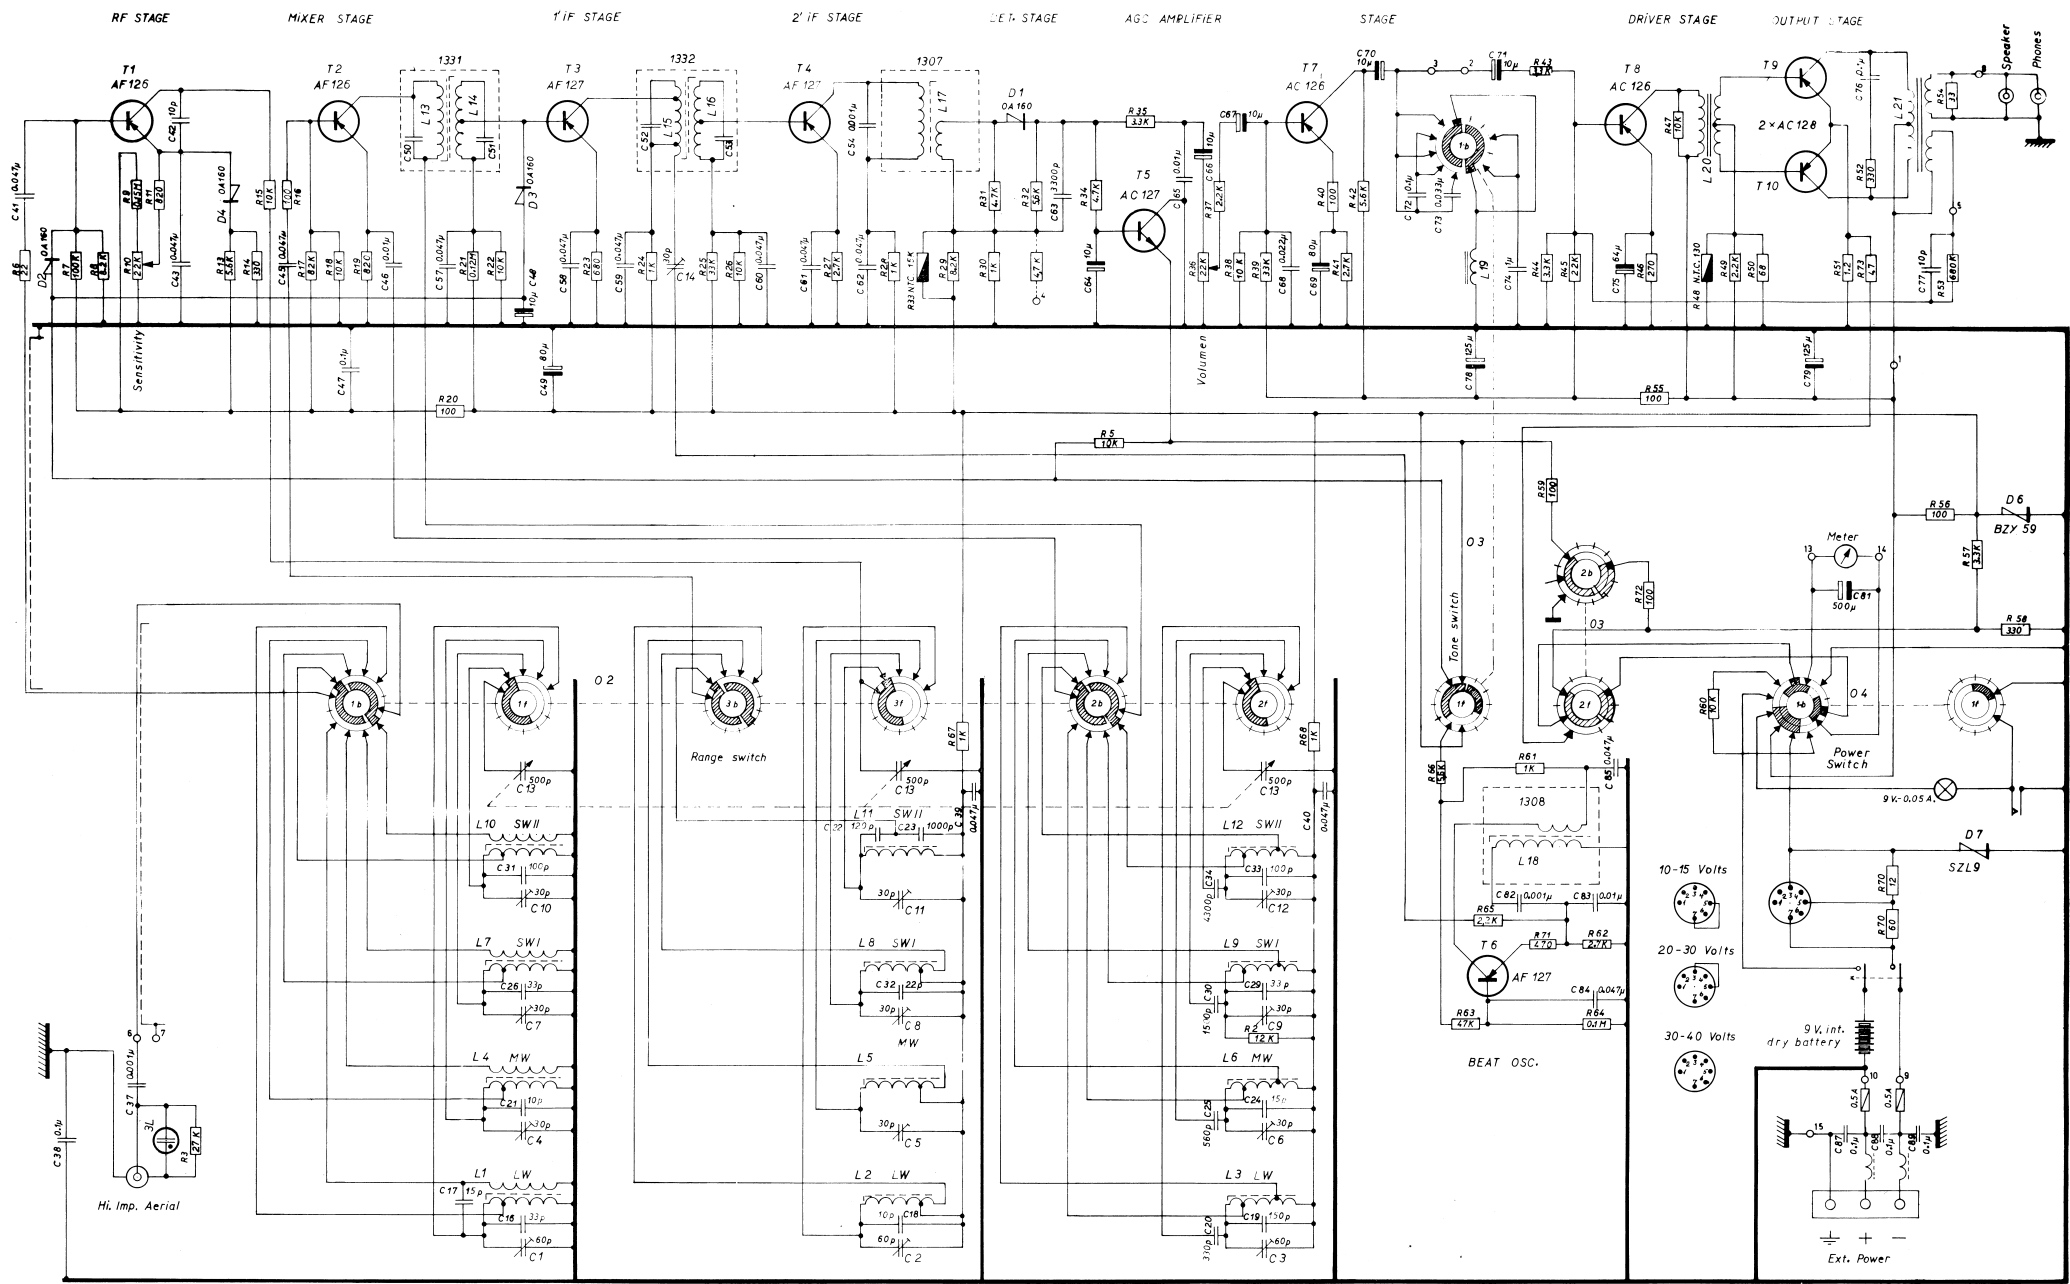


1<sup>st</sup> RF SECTION

2<sup>nd</sup> RF SECTION

 OSC. SECTION



T1-2-3-4-6

 


T5-7-8-9-10

**DIAGRAM SAILOR 46 TD**  
A/S S. P. RADIO  
DANMARK

Dette diagram omfatter SAILOR 46 TD, serie C  
Dieses Schaltschema betrifft SAILOR 46 TD, Serie C  
This diagram refers to SAILOR 46 TD, series C  
Ce schéma comprend SAILOR 46 TD, série C  
Este diagrama comprende SAILOR 46 TD, serie C


TRANSISTOR TERMINAL CONNECTION

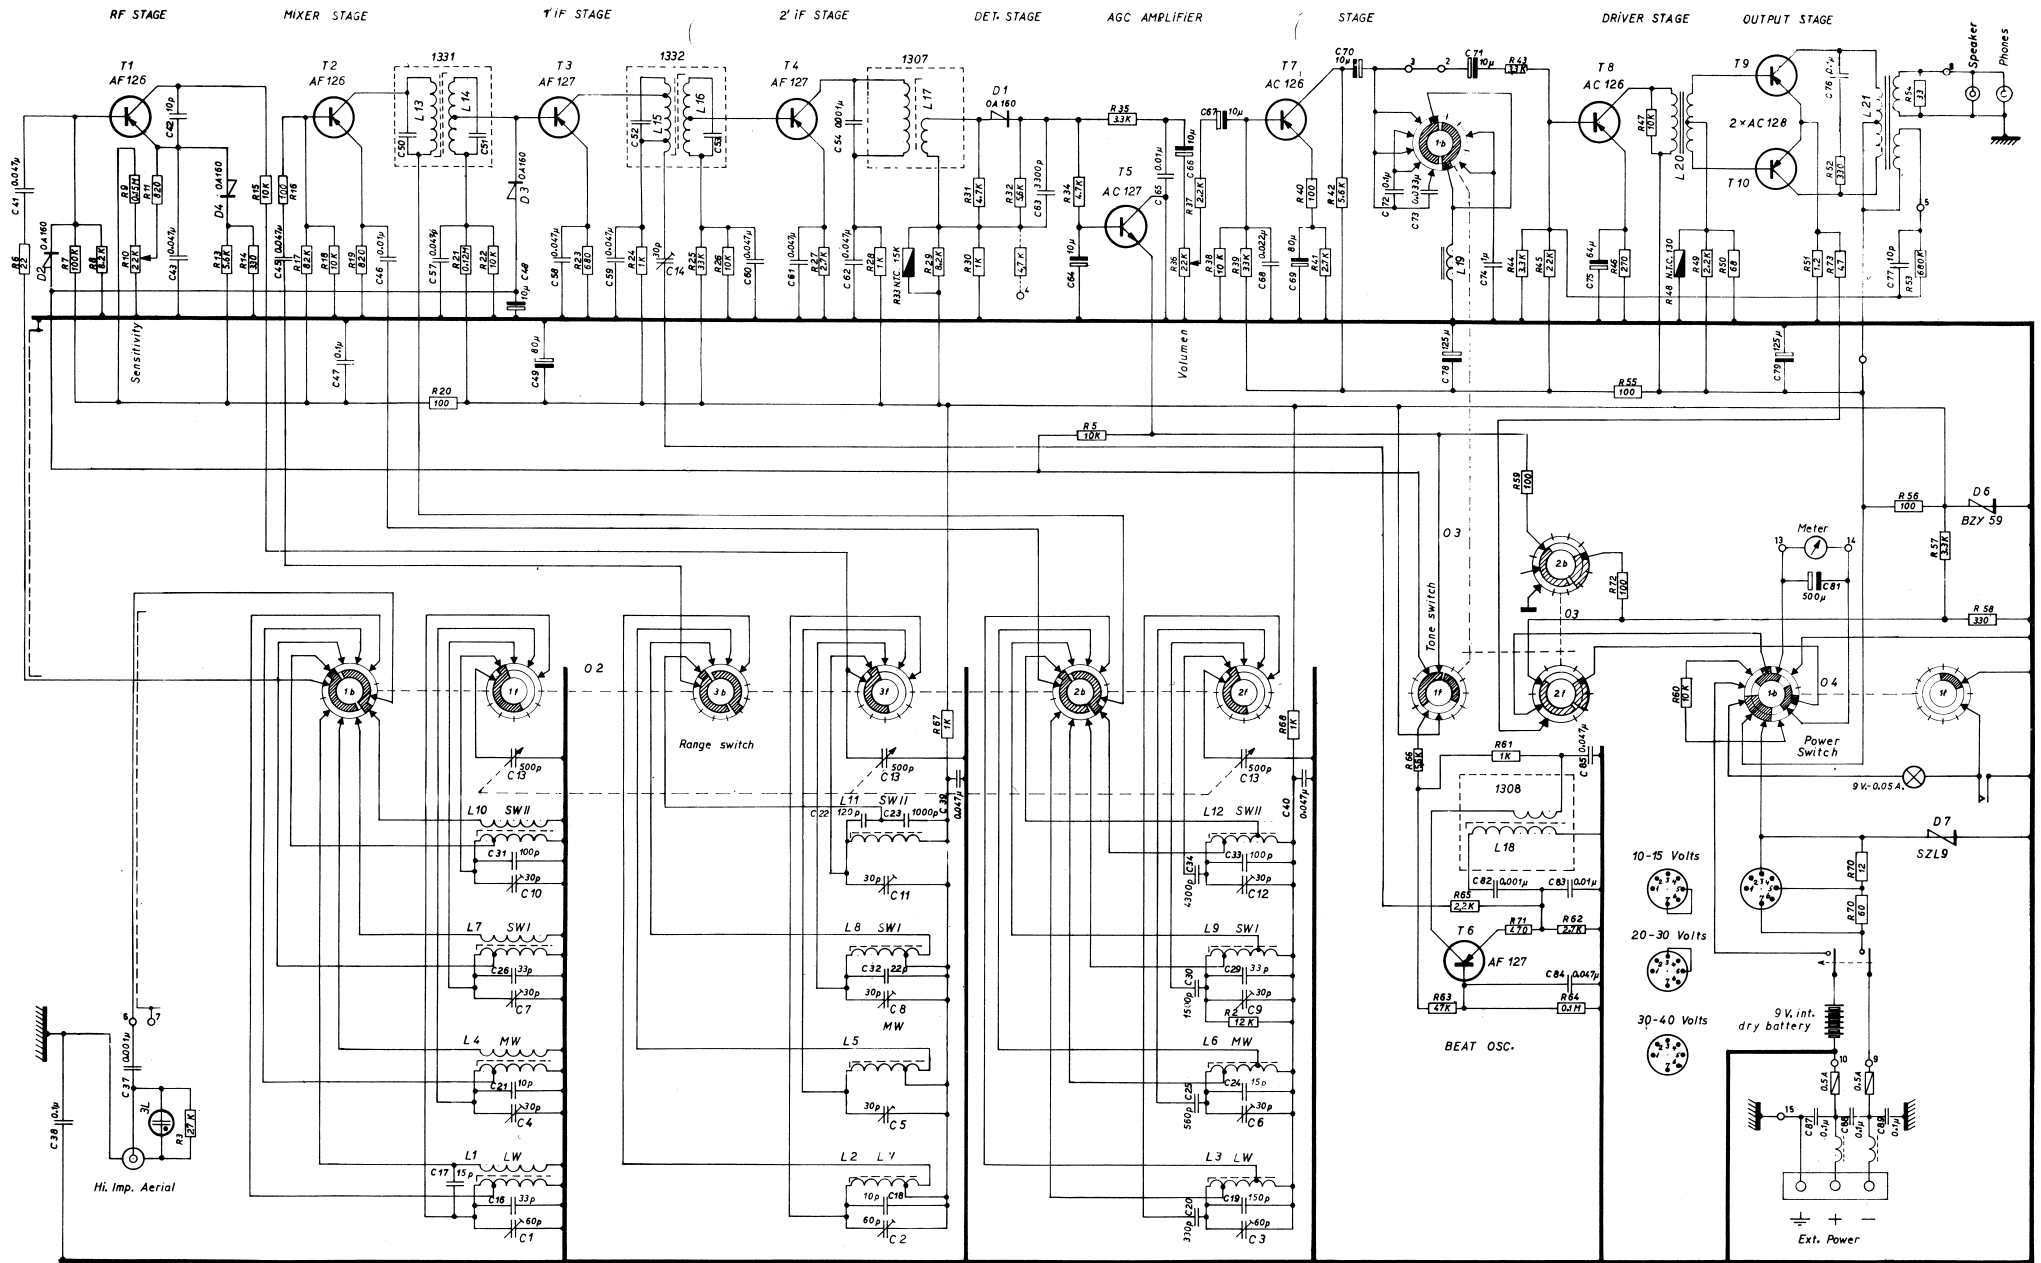


1' RF SECTION

2' RF SECTION

 OSC. SECTION



T1-2-3-4-6

 


T5-7-8-9-10

TRANSISTOR TERMINAL CONNECTION

Dette diagram omfatter SAILOR 46 TD med bogstaverne D og E efter apparatets nummer.  
 Dieses Schaltschema betrifft SAILOR 46 TD mit den Buchstaben D und E nach der Nummer des Gerätes.  
 This diagram refers to SAILOR 46 TD with the letters D and E placed after the number of the receiver.  
 Ce schéma comprend SAILOR 46 TD avec les lettres D et E après le numéro du récepteur.  
 Éste diagrama comprende SAILOR 46 TD con las letras D y E detrás del número del receptor.


**DIAGRAM SAILOR 46 TD**  
**A/S S. P. RADIO**  
**DANMARK**

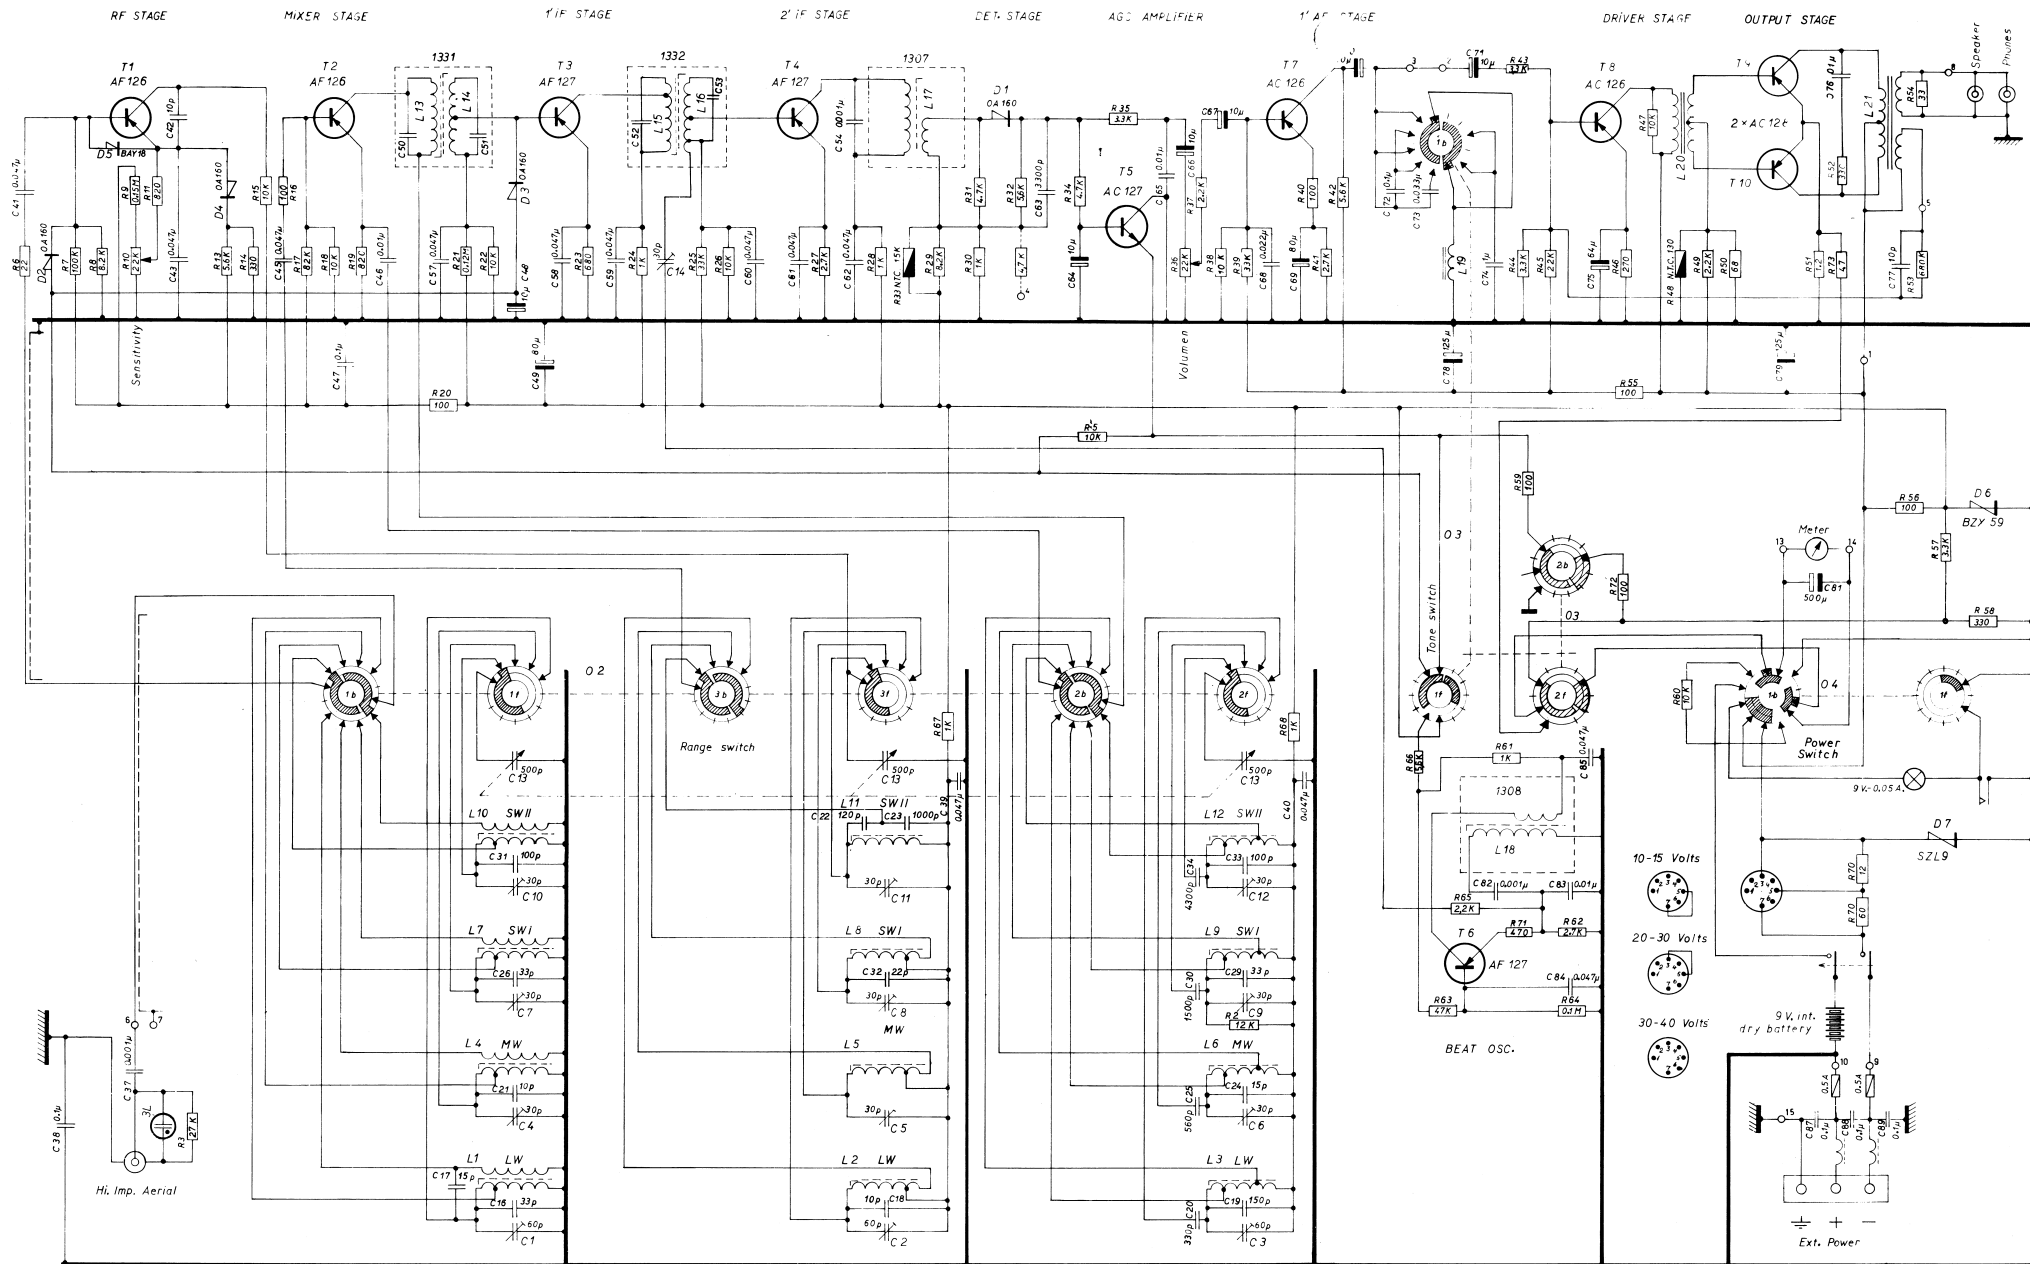

1<sup>st</sup> RF SECTION

2<sup>nd</sup> RF SECTION

 OSC. SECTION



T1-2-3-4-6

T5-7-8-9-10

TRANSISTOR TERMINAL CONNECTION

Dette diagram omfatter SAILOR 46 TD med bogstavet F efter apparatets nummer.  
 Dieses Schaltschema betrifft SAILOR 46 TD mit dem Buchstaben F nach der Nummer des Gerätes.  
 This diagram refers to SAILOR 46 TD with the letter F placed after the number of the receiver.  
 Ce schéma comprend SAILOR 46 TD avec les lettres F après le numéro du récepteur.  
 Este diagrama comprende SAILOR 46 TD con las letras F detrás del número del receptor.

DIAGRAM SAILOR 46 TD  
 A/S S. P. RADIO  
 DANMARK