

BAND RANGE
1 1500 - 2000 KHz
2 2000 - 2700 KHz
3 2700 - 3600 KHz
4 3600 - 4500 KHz
5 4500 - 5400 KHz
6 5400 - 6300 KHz
7 6300 - 7200 KHz
8 7200 - 8100 KHz
9 8100 - 9000 KHz
10 9000 - 10000 KHz
11 10000 - 11000 KHz
12 11000 - 12000 KHz
13 12000 - 13000 KHz
14 13000 - 14000 KHz
15 14000 - 15000 KHz
16 15000 - 16000 KHz
17 16000 - 17000 KHz
18 17000 - 18000 KHz
19 18000 - 19000 KHz
20 19000 - 20000 KHz
21 20000 - 21000 KHz
22 21000 - 22000 KHz
23 22000 - 23000 KHz
24 23000 - 24000 KHz
25 24000 - 25000 KHz
26 25000 - 26000 KHz
27 26000 - 27000 KHz
28 27000 - 28000 KHz
29 28000 - 29000 KHz
30 29000 - 30000 KHz
31 30000 - 31000 KHz
32 31000 - 32000 KHz
33 32000 - 33000 KHz
34 33000 - 34000 KHz
35 34000 - 35000 KHz
36 35000 - 36000 KHz
37 36000 - 37000 KHz
38 37000 - 38000 KHz
39 38000 - 39000 KHz
40 39000 - 40000 KHz
41 40000 - 41000 KHz
42 41000 - 42000 KHz
43 42000 - 43000 KHz
44 43000 - 44000 KHz
45 44000 - 45000 KHz
46 45000 - 46000 KHz
47 46000 - 47000 KHz
48 47000 - 48000 KHz
49 48000 - 49000 KHz
50 49000 - 50000 KHz
51 50000 - 51000 KHz
52 51000 - 52000 KHz
53 52000 - 53000 KHz
54 53000 - 54000 KHz
55 54000 - 55000 KHz
56 55000 - 56000 KHz
57 56000 - 57000 KHz
58 57000 - 58000 KHz
59 58000 - 59000 KHz
60 59000 - 60000 KHz
61 60000 - 61000 KHz
62 61000 - 62000 KHz
63 62000 - 63000 KHz
64 63000 - 64000 KHz
65 64000 - 65000 KHz
66 65000 - 66000 KHz
67 66000 - 67000 KHz
68 67000 - 68000 KHz
69 68000 - 69000 KHz
70 69000 - 70000 KHz
71 70000 - 71000 KHz
72 71000 - 72000 KHz
73 72000 - 73000 KHz
74 73000 - 74000 KHz
75 74000 - 75000 KHz
76 75000 - 76000 KHz
77 76000 - 77000 KHz
78 77000 - 78000 KHz
79 78000 - 79000 KHz
80 79000 - 80000 KHz
81 80000 - 81000 KHz
82 81000 - 82000 KHz
83 82000 - 83000 KHz
84 83000 - 84000 KHz
85 84000 - 85000 KHz
86 85000 - 86000 KHz
87 86000 - 87000 KHz
88 87000 - 88000 KHz
89 88000 - 89000 KHz
90 89000 - 90000 KHz
91 90000 - 91000 KHz
92 91000 - 92000 KHz
93 92000 - 93000 KHz
94 93000 - 94000 KHz
95 94000 - 95000 KHz
96 95000 - 96000 KHz
97 96000 - 97000 KHz
98 97000 - 98000 KHz
99 98000 - 99000 KHz
100 99000 - 100000 KHz

CRYSTAL SOCKET "EXTERNAL" IS PLACED IN THE FRONT PLATE OF THE TRANSMITTER AND LABELLED: "EXTERNAL CRYSTAL".
A CRYSTAL STORAGE IS PLACED ON TOP OF TRANSMITTER, CONTAINING THE FOLLOWING INSTRUCTION: FOR OPERATION OF TRANSMITTER WITH EXTERNAL CRYSTAL: INSERT ONE OF CRYSTALS LABELLED 29-52 INTO SOCKET LABELLED "EXTERNAL CRYSTAL" AND SET SWITCH TO POSITION "EXTERNAL".

COLOURCODE	BLUE	YELLOW	BROWN	RED	WHITE	BLACK	ORANGE
BLUE	L	NL					
YELLOW		U					
GREEN			N	NA			
BROWN				B	BA		
RED					A	RA	
WHITE							NH
BLACK							
ORANGE							
GREEN/YELLOW/BLACK							NUS

