


De to skruer, der holder LF-PW-pladen 602 L 6, skrues af, og pladen vippes op.  
 Modbetoningsproppen (994 L 27), som sidder i stereodekoderfatningen (ved siden af stereoindikatorlampen), fjernes.  
 Ledn. pølsen med stikproppen fra stereodekoderen type 0001 trækkes fra dekodekens plads ind under skinnen (for fastspænding af PW-pladerne) og frem til stikdåsen, og stikket sættes i.  
 Indicatortransistoren AC 153, som er forsynet med kølefinne, trækkes, samtidig med, at man sætter dekodeeren på plads, ned og ud gennem chassiset (over indv. HT stikdåse) og skrues fast udvendig på chassiset med en selvskærende skrue (2012900) i det frie hul på overkanten af chassiset. Der skal en spændeskive (0286135) mellem skruen og kølefinnen.  
 Stereodekoder PW-pladen fastloddess på de to tappe af vinklen, (som LF-PW-pladen) og skrues fast på skinnen med en skrue (2038007) og en fiberskive (0376369).  
 Ved montering i Beomaster 900 udelades: 1 vinkel (0760472) 1 skrue (2038007).



Unscrew the two screws retaining the AF PW-board (602 L 6) and tip the board upwards.  
 Remove the de-emphasis plug (994 L 27) from the Stereo Decoder connector socket (adjacent to the stereo indicator lamp).  
 Full the plug-terminated wiring harness coming from Stereo Decoder (type 0001) out from the place intended for the Decoder; then pull it in below the PW-board mounting strip and out to the connector socket and insert the plug.  
 While mounting the Decoder in position, pull the cooling-fin-equipped indicator transistor, AC 153, down and out through the chassis (above the inside speaker connector socket) and screw it into place on the outer side of the chassis, using a self-tapping screw (2012900) in the free hole on the top side of the chassis. A washer (2086135) is required between the screw and cooling fin.  
 Solder the Stereo Decoder PW-board to the two studs of the bracket (in the same manner as the AF PW-board) and screw it into place on the mounting strip, using a screw (2038007) and a fibre washer (0376369).  
 When installing the Stereo Decoder in the Beomaster 900 omit one bracket (0760472) and one screw (2038007).

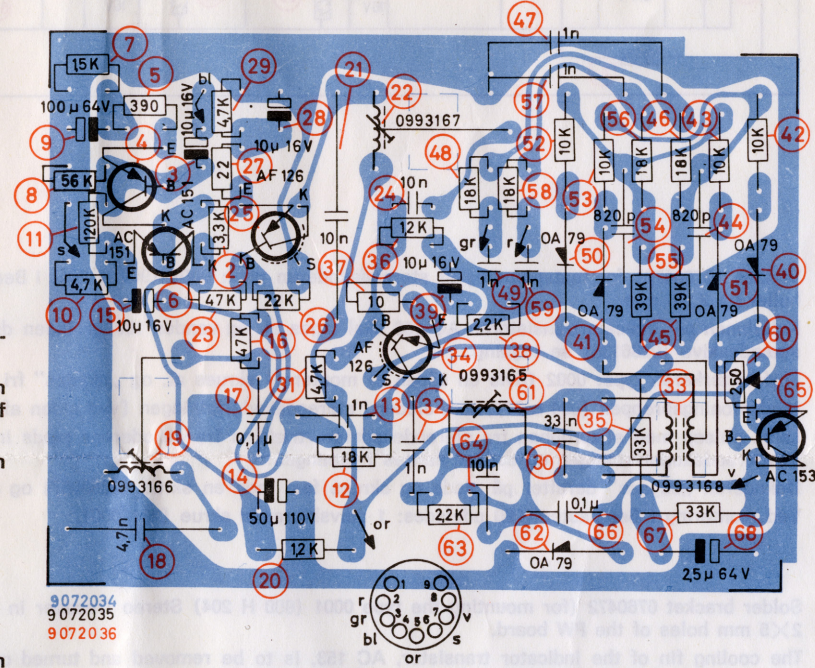

**Stereodekoder type 0001**  
 (900H204)  
**BEOMASTER 900**



